

## Octane Rō How to Verify the Firmware Version

1. Row the machine to activate the console.
2. Press and hold **time plus and minus (+/-)** for three seconds.



3. The firmware version is displayed in the middle of the screen.



4. Press **Pause Clear** twice to exit.

