

Octane[®]

F I T N E S S



“XT” CONSOLE GUIDE & SET-UP INSTRUCTIONS— STANDARD CONSOLE

TABLE OF CONTENTS

Standard Console Guide

- **XT-One Console Features**..... 1
- **Dynamic Display (LCD)**..... 2
- **Keypad Buttons**..... 4

User (Club) Settings 7

Additional Support Information 8

- **Cleaning and Maintenance**..... 8
- **Diagnostics**..... 8
- **Programs**..... 8
- **Important Safety Information** 8
- **Customer Support**..... 8


STANDARD CONSOLE GUIDE

Get ready to Fuel Your Workout with the Octane Fitness elliptical cross trainer! The standard console offers a variety of pre-programmed workouts managed by sophisticated electronics that will keep you interested and motivated. Use this guide to become familiar with its features, data display and keypad buttons; then hop on, start pedaling, choose your workout and adjust the settings. Enjoy!


XT-One Console Features

The XT-One standard console incorporates many features to enhance your workout experience:



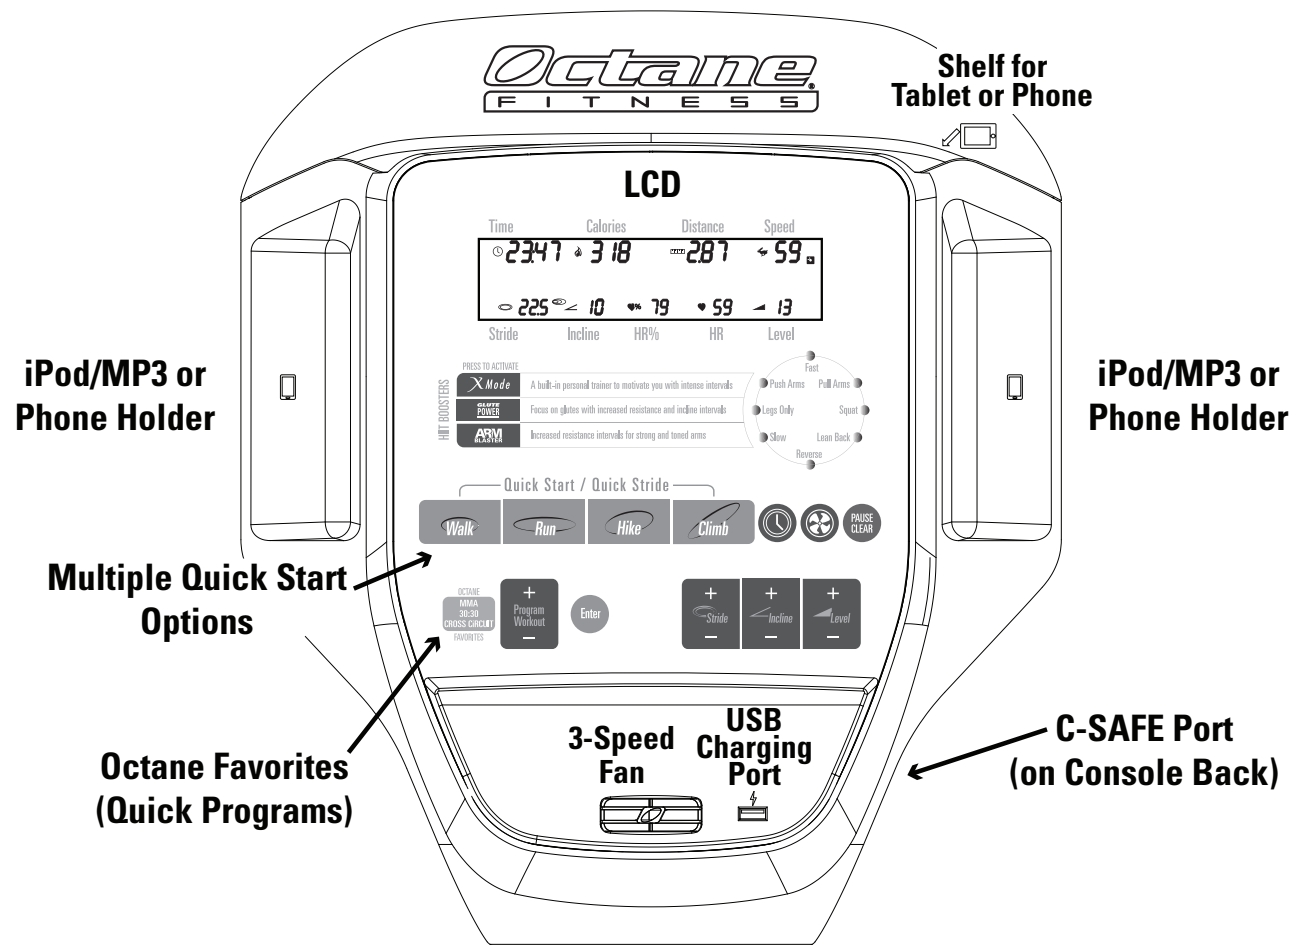


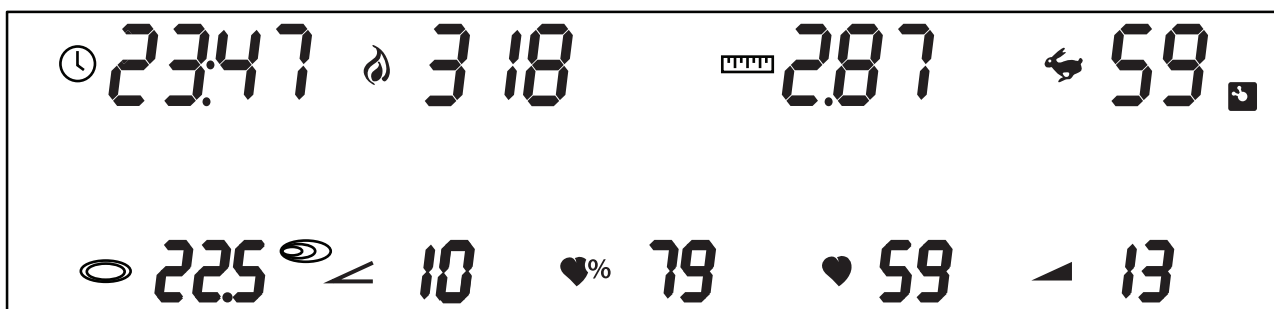


- An integrated LCD that provides important workout data and instructions to keep your workout safe and interesting;
- Convenient shelves and pockets for your phone, tablet, iPod®/MP3 and other electronic devices, plus a USB charging port to keep your devices charged throughout your workout;
- A 3-speed fan for cooling comfort;
- Pre-programmed keypad buttons to get you into your favorite programs quickly;
- C-SAFE input for intra-club networking.






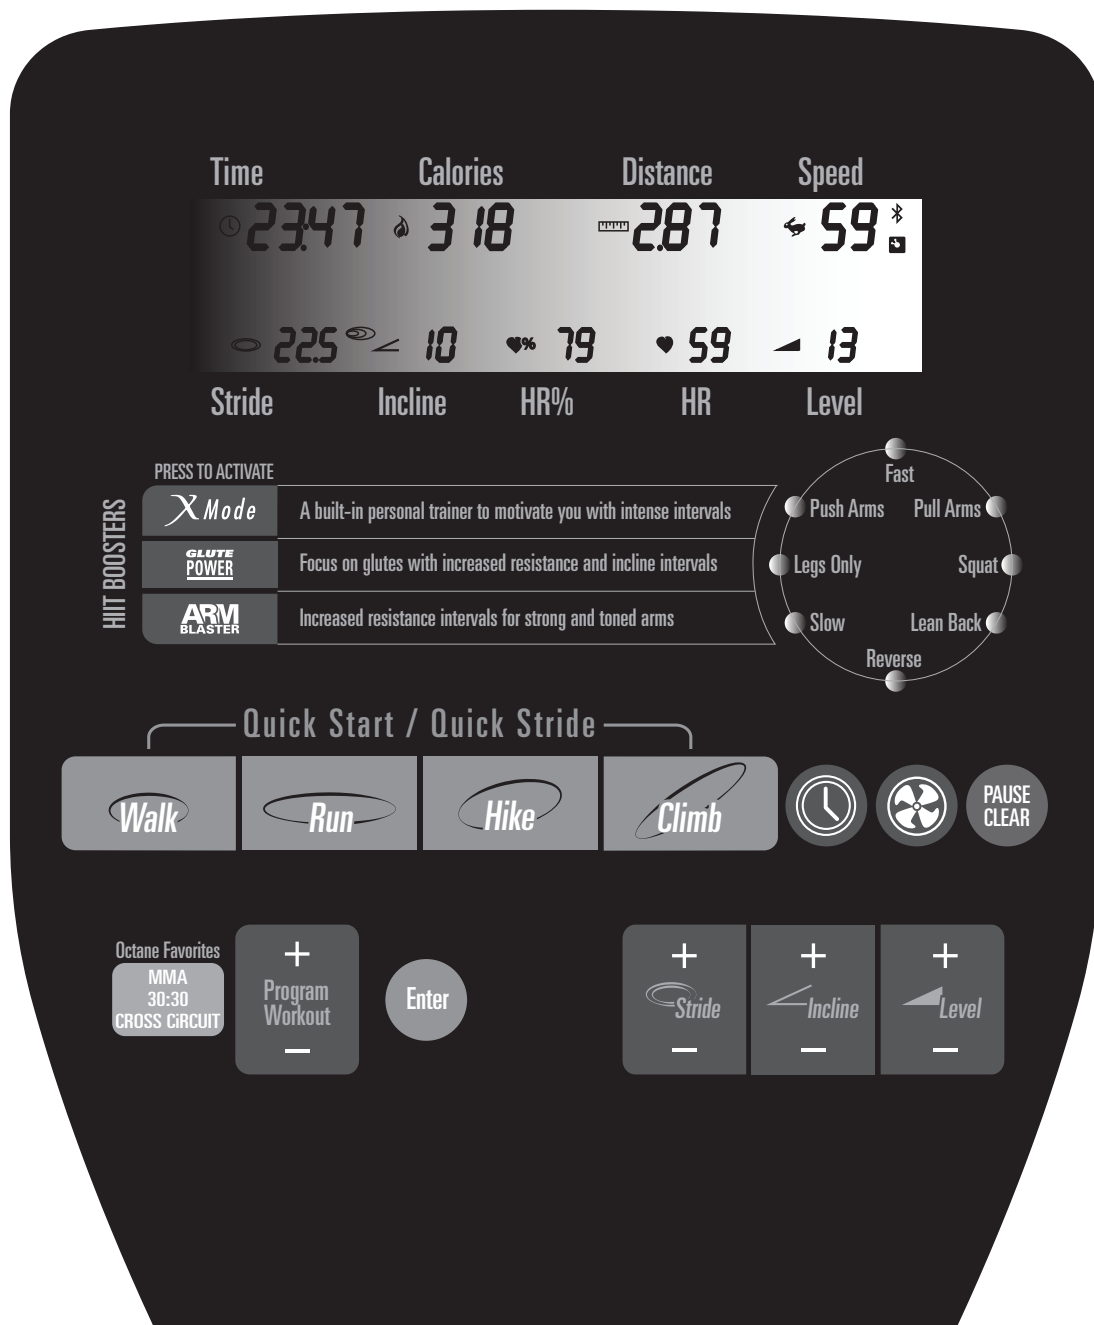
Dynamic Display (LCD)



The top portion of the standard console is an LCD which prompts you to enter important information, dynamically displays all of the important workout data, and highlights aspects of your workout such as upcoming intervals and resistance changes. Watch the display as you set up and progress through your workout—it will guide you, motivate you, and reward you with summary information at the end of your session.







Icon	Description
	Displays workout time , counting up from 0:00. Time can be increased or decreased during your workout. The maximum workout time that users can set is 99:00. When actual workout time is displayed, the timer goes up to 99:59, then the display rolls over to 0:00. Refer to User (Club) Settings later in this manual to learn how to change the maximum workout time and to switch from a “count up” to “count down” display.
	Displays an estimate of the total calories burned during the workout, based on the user’s entered weight. If no specific weight is entered, calories are based on a 150 lb. (68 kg) user.
	Displays an estimate of the distance you have traveled. Distance can be shown in either miles (English) or kilometers (metric). The factory default setting is English. Refer to User (Club) Settings later in this manual to learn how to switch from English to metric.
	Displays your current speed in revolutions per minute (rpm).
	When lit, this icon indicates that ANT+™ wireless communications is active and detecting signal from the optional wireless heart rate chest strap.
	Displays your stride length , the approximate horizontal distance of the elliptical pattern in inches (English) or centimeters (metric). The stride length ranges from 20 inches (51 cm) to 28 inches (71 cm).
	When lit, this icon indicates that SmartStride is activated. As you vary your pace and direction, SmartStride intuitively adjusts stride length in 1-inch (2-centimeter) increments to replicate natural movement. Simultaneously press the Stride (+) and (-) buttons on the keypad to activate/deactivate SmartStride.
	Displays the incline level (1-10), where 1 is the least incline and 10 is the greatest incline.




	Displays your current heart rate percentage , calculated as current heart rate divided by theoretical maximum heart rate (TMHR). Note: <i>The standard TMHR is calculated for a 40-year old user weighing 150 lbs. (68 kg). You must have entered your age during program setup and be wearing a wireless heart rate transmitter or consistently grasping the contact heart rate sensor grips on the handlebars in order to get an accurate reading of Heart Rate % for your age and weight.</i>
	Displays heart rate in beats per minute (BPM). Note: <i>You must be wearing a wireless heart rate transmitter or consistently grasping the contact heart rate sensor grips on the stationary handlebars.</i>
	Displays the resistance level (1-30), where 1 is the lowest resistance level and 30 is the highest.



Keypad Buttons

<p>HIIT Boosters</p> <p><i>X Mode</i></p> <p>GLUTE POWER</p> <p>ARM BLASTER</p>	<p>Ramp up any workout with the press of a button, activating one of these signature Octane Fitness high-intensity interval training boosters:</p> <p>This great motivational tool keeps your workout fresh and exciting in any program. Every other minute X-Mode kicks in, adding four levels of resistance and prompting you to perform combinations of eight different challenges:</p> <p>Fast Pick up the pace—we recommend 50-60 rpm, but you should find your own comfort level.</p> <p>Squat Bend slightly at the knees as you pedal. You'll feel this one in your quadriceps and glutes in no time!</p> <p>Reverse Pedal backwards to change the muscle focus on your entire lower body.</p> <p>Lean Back Grab the stationary handlebars and lean slightly backwards. This changes the muscle focus to your lower body. You will feel this in your quadriceps.</p> <p>Legs Only Either hold the stationary handlebars or naturally swing your arms.</p> <p>Push Arms Focus on pushing with your arms to work your chest and triceps.</p> <p>Pull Arms Focus on pulling with your arms to work your biceps and lats.</p> <p>Slow Slow down to 30-40 rpm to allow yourself to recover.</p> <p>Challenge your quads and glutes with this workout booster that pushes back! Press the GlutePower button during any workout, then increase your speed. The faster you go, the greater the resistance level and the steeper the incline. Slow down again and the resistance and incline decrease.</p> <p>Designed to boost cardiovascular endurance while building strength and muscle tone, ArmBlaster adds upper-body strength sessions to the cardio program profile that you have selected. Every minute, resistance increases for a muscle-building, 10-repetition set as you transfer the workload from your lower body to your upper body.</p> <p>During a HIIT Booster session, the level of resistance can be changed by pressing any (+) or (-) key on the keypad. Press the HIIT Booster button a second time to deactivate the session.</p>
--	--

<p>Quick Start / Quick Stride</p> <p> Walk</p> <p> Run</p> <p> Hike</p> <p> Climb</p>	<p>The easiest way for you to start your workout is to simply push one of the four Quick Start / Quick Stride buttons, initiating a preset program at resistance Level 5. The values for Stride and Incline are set to simulate the chosen motion:</p> <p>Stride 22" (61 cm), Incline 1</p> <p>Stride 28" (71 cm), Incline 1</p> <p>Stride 24" (61 cm), Incline 5</p> <p>Stride 28" (71 cm), Incline 10</p> <p>The calories readout will be based on a 150 lb. (68 kg) user, age 40. Once you have selected Quick Start, you can program Time, Level or Stride in any order. (Age and Weight can only be changed by selecting a program using the Program Workout button and entering the values during setup.)</p>
<p></p>	<p>Press the clock button (Time), then any (+) or (–) to increase or decrease the time of your workout, in 1 minute increments. The standard workout time is 30:00. The maximum time is 99:00; this value can be changed in User (Club) Settings if a different maximum workout time better suits your environment.</p>
<p></p>	<p>Press the Fan button to initiate a cool breeze to help keep you comfortable as you work out. Press again to increase the airflow (two additional levels), or a fourth time to turn it off. Move the vent as desired to direct the airflow.</p>
<p>Pause Clear</p>	<p>Press once to pause your workout. The standard pause time is 0:55. To restart a paused workout, push any key or just begin pedaling. If you stop pedaling during a workout, the unit will automatically begin a pause phase; simply start pedaling to resume your workout. Press the Pause Clear button twice within two seconds, and the machine is reset and ready for another workout.</p>
<p>Octane Favorites</p> <p>MMA</p> <p>30:30</p>	<p>Press the Octane Favorites button to quickly jump to one of these signature programs:</p> <p>Battle the Octane elliptical in 5-minute rounds that include 5 alternating ‘fight’ and ‘recover’ intervals of various lengths, simulating a Mixed Martial Arts bout. The harder you punch with your arms, the harder the Octane elliptical ‘fights back’ with increased resistance.</p> <p>Press this button a second time to take on this challenging program which provides a simple test of fitness level with 5 sets of 30-second sprint and recovery intervals. For each set, the program monitors heart rate and calculates the average minimum and average maximum heart rates and the average number of beats the heart rate recovers between sprint intervals. Heart rate recovery is a relative indicator of fitness level; a higher number indicates a more rapid heart rate recovery and therefore represents a relatively better level of fitness.</p>

<p>CROSS CiRCUIT Solo</p> <p>CROSS CiRCUIT Group</p>	<p>The third press of the Octane Favorites button takes you to this popular cross-training program which combines cardio intervals on the elliptical with sets of strength and toning exercises off the machine using Powerblocks or simple equipment such as hand weights, a fitness ball or body-weight exercises. Note: <i>This program is available only when the CROSS CiRCUIT programs, designed for use with the optional CROSS CiRCUIT Pro Accessory, have been activated in User (Club) Settings.</i></p> <p>Working out with an instructor? Toggle to this Octane Favorite and follow your trainer's lead for a great cardio and strength workout. Note: <i>This program is available only when the CROSS CiRCUIT programs, designed for use with the optional CROSS CiRCUIT Pro Accessory, have been activated in User (Club) Settings.</i></p>
<p>Up (+) and Down (-) Keys</p>	
<p>Program Workout</p>	<p>Press Program Workout (+) or (-) to scroll through the programs, then press Enter to select a program. Program changes can be made any time during your workout. When you change programs, the LCD message center prompts you to enter new program values as needed.</p>
	<p>Press Stride (+) or (-) to increase or decrease the stride length of the XT-One. Each key press equals one-half (1/2) inch (English) or one centimeter (metric). The stride length ranges from 20 inches (51 cm) to 28 inches (71 cm). The default stride length for preset resistance and heart rate controlled programs is 24" (61 cm). For variable stride programs, the default forward or long stride is 28" (71 cm) and the default backward or short stride is 24" (61 cm).</p>
	<p>Press Incline (+) or (-) to increase or decrease the incline of the XT-One; 1 is the least incline and 10 is the steepest. For programs other than the preset Quick Start programs, the standard setting is 1.</p>
	<p>Press Level (+) or (-) to increase or decrease the resistance level of the XT-One. There are 30 levels of resistance for most programs. For heart rate controlled programs, the Level button increases your target heart rate. To save a change in target heart rate, press Enter.</p>
<p>Enter</p>	<p>Selects any of the changed values or items from the above keys.</p>
<p>"Hidden" Key</p>	
<p>SmartStride (Stride + / -)</p>	<p>SmartStride, available exclusively on Octane Fitness ellipticals, automatically replicates natural movement by analyzing and measuring an exerciser's pace and direction and intuitively adjusting stride length in 1-inch (2-centimeter) increments from 20 inches (51 cm) to 28 inches (71 cm). To activate SmartStride in any program, simultaneously press the Stride (+) and (-) buttons on the keypad, then pedal at a comfortable walking speed. The machine will analyze your stride to set a baseline. Then, as you workout and your pace or direction changes, SmartStride makes the appropriate adjustments to your stride length. Size-based programming (described later in this manual) allows you to set the starting forward stride length that best fits your leg length and fitness level. To deactivate SmartStride, simultaneously press the Stride (+) and (-) buttons on the keypad a second time.</p>

USER (CLUB) SETTINGS

Many of the standard features and controls of Octane Fitness units can be customized to fit your personal preferences or workout environment. In just a few simple steps, you can set up the machine to skip the Warm-Up, count down your workout time (instead of counting up), limit the maximum workout time, display units in English or metric, mute the console beeps and more. All of these adjustments are easily completed and are saved as the new standard for the machine—you don't need to reset them for each use.

To access these functions, press and hold both the Level Up (+) and Level Down (–) keys for three seconds, or until you hear a beep. The following customizable functions are displayed in sequence in the LCD; use the Enter key to toggle through the available options (shown in the matrix display) for each function, and press any Up (+) or Down (–) to select a setting and move to the next function. To exit without changing any values, press Pause Clear twice.

Warm-Up	This feature may be turned "ON" (to include a 3-minute warm-up in each workout) or "OFF". The factory default setting is "ON".
Clock Direction	The cross-trainer can track workout time by counting "UP" or "DOWN". The factory default setting is "UP".
Max Workout Time	You may set the maximum workout time for users to the value that is best for your environment. Use the Enter key to scroll through the possible values between 10:00 and 99:00. Press the Up (+) or Down (–) key to select the value you desire. The factory default setting is 99 minutes.
Unit Type	You may choose to have the weight and distance units displayed in "ENGLISH" (pounds and miles) or "METRIC" (kilograms and kilometers). The factory default setting is "ENGLISH".
CROSS CIRCUIT Pro	Select "OFF" to disable the two CROSS CIRCUIT Pro programs (for use with the optional CROSS CIRCUIT Pro Kit). Factory default is "ON".
Default Stride	You may set the default stride length of the unit to any value between 20" and 28" (51-71 cm) in 1/2" (1 cm) increments. Use the Enter key to scroll through the possible values, then press any Up (+) or Down (–) key to select the value you desire. The factory default setting is 24" (61 cm).
Default Incline	You may set the default incline of the unit to any value between 1 (least incline) and 10 (steepest). Use the Enter key to scroll through the possible values, then press any Up (+) or Down (–) key to select. For programs other than the preset Quick Start programs, the factory default setting is 1.
Beep	You may turn the console sounds "ON" or "OFF". The factory default setting is "ON".
ID	If you have more than one Octane Fitness unit on site, use this setting to give each a unique identification number for pairing with a mobile device. Choose any value between 0 and 127. The factory default setting is 1.
Language	Choose one of several languages options for the console display. The factory default setting is "ENGLISH".
Exit	When EXIT is displayed in the LCD, press Enter to leave User (Club) Settings. All of your selections will be saved and become the new standard settings for your machine. They may be changed at any time by repeating these setup procedures.

ADDITIONAL SUPPORT INFORMATION

Cleaning and Maintenance

WARNING! This machine contains moving parts. Take caution when trying to locate and fix any problem with the machine.

Your Octane Fitness product has been manufactured to withstand many hours of hard use with minimal required maintenance. Use only a soft, slightly damp lint-free cloth to clean the console lens of your elliptical. Abrasive cloths, towels, paper towels, and similar items may cause damage to surface. Do not use window cleaners, household cleaners, aerosol sprays, solvents, alcohol, ammonia, or abrasive cleaners, as they, too, may damage the lens. Periodically wipe off the machine with a clean towel, and vacuum underneath the pedals and inside of the machine near the pedals.

Diagnostics

The XT-One offers a diagnostics mode to test the electrical functions. These diagnostics allow you to identify the software version of your unit and to check the functions of the LCD, keypad, adjustment motors and other electrical elements. To enter the diagnostics mode, hold down the Program Workout (+) and (-) keys simultaneously for three (3) seconds. Tests and results are displayed in the LCD. Use any (+) and (-) key to navigate through the diagnostic tests options.

For additional information and instructions for using the available diagnostics, refer to your Product Service Manual or contact Octane Fitness Customer Service at 888.OCTANE4 or 763.757.2662, extension 1.

Programs

In addition to the Quick Start / Quick Stride options, the XT-One features 17 built-in programs with a wide range of options to keep workouts interesting:

MMA	Progressive Hill	Fat Burn
30:30	Manual	Heart Rate Custom Interval
CROSS CiRCUIT Group	Random	Constant Watts
CROSS CiRCUIT Solo	Distance Goal	Constant METs
Mountain Peak	Calorie Goal	Smart Stride
Hill Interval	Interval	

Descriptions of each program are found in the **Octane Fitness Program and Features Guide** (Part Number 110751-001), available online at www.octanefitness.com. Just navigate to the XT-One product page and select the guide for online review or download.

Important Safety Information

The **Octane Fitness Product Safety Information for Commercial Products** (Part Number 107786-001), shipped with the product base unit, contains important details for safe setup and operation of the Octane Fitness product. Users are expected to be familiar with the contents of this document before using the elliptical.

Customer Support

Should you have any questions regarding your Octane Fitness product, please visit <https://support.octanefitness.com> where you will find answers to many common questions. Or, if you would like to speak to an Octane Fitness Customer Service specialist, please call 888.OCTANE4 or 763.757.2662, extension 1. Live support is available Monday through Friday, 7:30 a.m. to 6 p.m. (United States Central Time).

Join the OCTANE FITNESS Community.



search: Octane Fitness

Free Downloads, Workout Inspiration, Team Atmosphere



FUEL YOUR LIFE™

Octane Fitness

US & Canada, Latin America, Asia & Asian Pacific

7601 Northland Drive North

Suite 100

Brooklyn Park, MN 55428

Phone: 888.OCTANE4 (US and Canada)

763.757.2662 (Latin America, Asia and Asian Pacific)

Fax: 763.323.2064

Octane Fitness International

Europe, Middle East, Africa

Rivium Westlaan 15

2909 LD Capelle a/d IJssel

The Netherlands

Phone: +31 10 2662412

Fax: +31 10 2662444

© 2016 Octane Fitness, LLC. All rights reserved. Octane Fitness, Fuel Your Life, XT-One, X-Mode, GlutePower, ArmBlaster, SmartStride, CROSS CIRCUIT Pro are registered trademarks of Octane Fitness. Any use of these trademarks, without the express written consent of Octane Fitness, is forbidden. iTunes, iPad, iPod and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries. ANT+ is a registered trademark of ANT Wireless.